



RP2022 Auger Motor

All Magnum BabyC, and Winchester AC unit

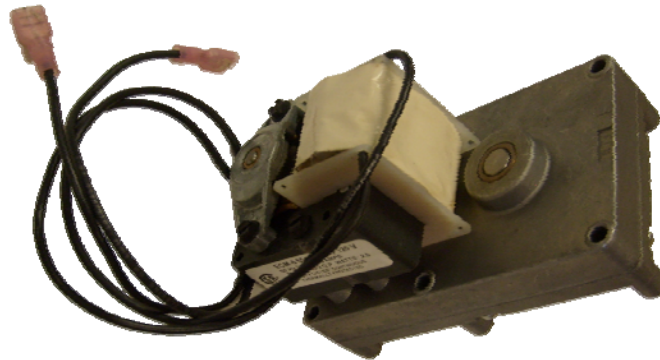


yellow lead from wire harness

Black lead from wire harness

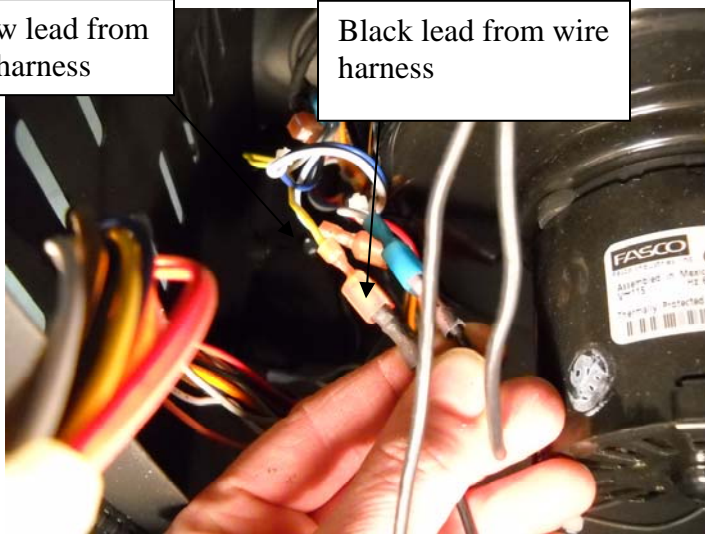

- Turn off power on control panel and unplug from the power supply.
- Disconnect the auger motor leads from the wire harness.

- Remove existing auger motor by loosening the set screw on the collar as shown. Make sure to loosen the set screw just enough to allow the shaft to slip off.

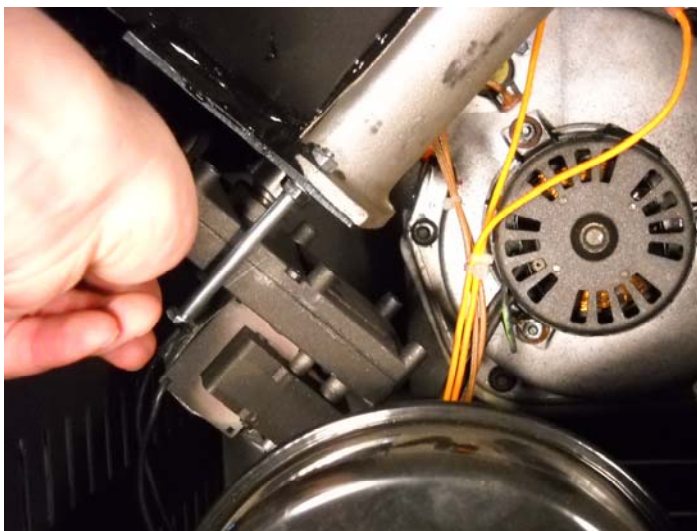

- Slide the motor shaft into the auger shaft

- Rotate the collar unit the set screw lines up with the clearance hole in the auger shaft.
- Tighten the set screw just enough to keep it from slipping off the shaft.
- Rotate the motor until the flat section of the motor shaft is directly under the set screw.
- Push the motor toward the auger until it stops.
- Tighten the set screw.
- Connect the wire harness wires 1-yellow lead and 1-white lead to the leads on the auger motor.
- Plug back into power supply.