


Right Side Panel

Part #BC5019

used on BabyC units

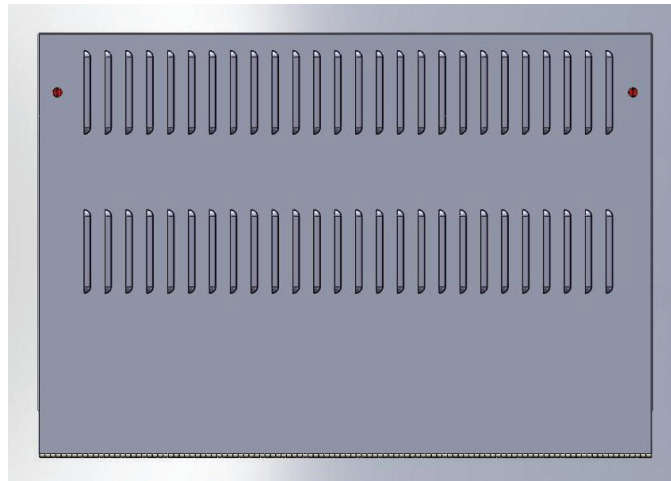

- Remove existing right side panel.
- Using (4) #8 x 1/2" tek screw attach the side panel to back panel. Make sure the top of the side panel is locate 1/8" from the top panel.

1/8" space between the top and side panel

