


Wire Harness Assembly


Part #PP-1037

For Models HR01 (2011 to present)

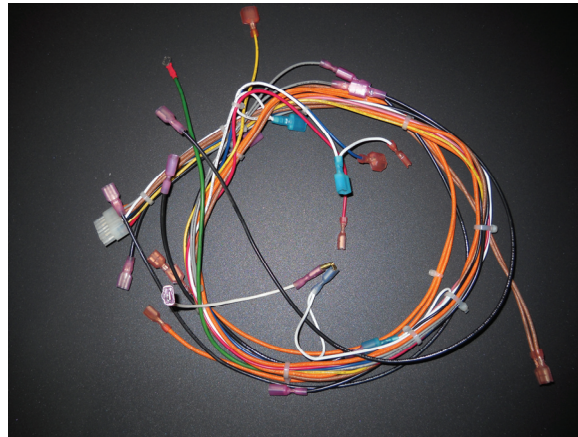

- Unplug unit
- Open both side panels.
- Remove existing wire harness.
- May need to cut off existing molex connectors and replace with male/female wire connectors.
- Attach the following:
 - Control Board

molex connector and black lead to terminal

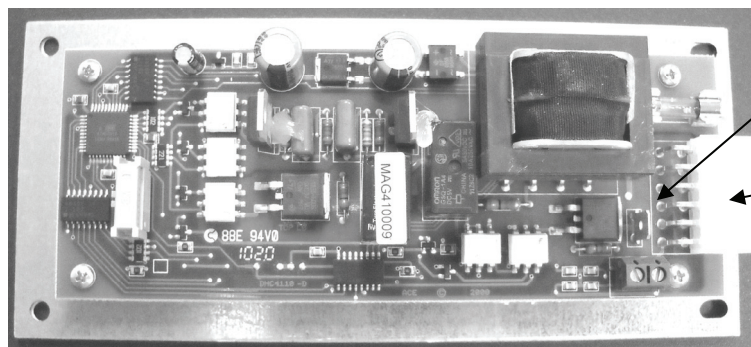

Fuel stirrer lead terminal

molex

- Fuel Stirrer motor black wire from control panel to one black lead double white lead to black lead
- Snap disc right side not used
- Exhaust Fan white wire to one lead blue wire to one lead
- High Limit Snap Disk two orange wires to both leads
- Vacuum Pressure Switch two grey wires to both leads top terminal and middle terminal
- Proof of Fire Snap Disk two brown wires to both leads
- Auger Motor white wire to one lead yellow wire to one lead
- Room Air Fan double white wires to one lead pink wire to one lead
- Electrical Plug double white wires middle terminal black wire bottom terminal
green wire to top terminal other end of green wire screwed to base of unit
- NOT USED red wire & white wire

- Plug unit in
- Turn on unit

HR01 MODEL WIRING DIAGRAM
 WARNING: DISCONNECT POWER BEFORE SERVICING THIS UNIT.

